

AEROSOL DISPENSER 1000



AEROSOL DISPENSER 1000

INSTRUCTIONS

1. Mount 7 to 10 feet above floor level and 12 feet away from exposed food. Avoid placing dispenser above an open doorway.
2. Place the unit in the OFF position when installing or replacing the 2 D-Cell batteries by observing marked polarity. When the unit is in the ON position, the LED indicator will blink GREEN to indicate when the unit is operating properly. When the LED indicator does not blink, this means the battery is low and will require new batteries.
3. Remove the cap from the aerosol can and insert the can upright into the holding bracket. Ensure that the spray nozzle points toward the front of the unit as you slide it in.
4. **KEEP YOUR EYES AND FACE** away from the spray nozzle while inserting the can and when turning unit on. Press the ON/OFF button to turn it on and off. The unit will spray every 15 minutes and operate for a full 3,000 spray cycles with an average quality set of batteries. The LED indicator will **STAY RED** when the aerosol can is empty and needs replacement.
5. Replace the aerosol canister regularly, usually every 30-45 days and be sure to follow the replacement directions above to insure you install new cans and batteries properly.
6. Close the cover and make sure the hatch button on top is secure and keeps the unit closed.



CAUTION: DO NOT EXPOSE EYES TO FRONT OF SPRAY NOZZLE WHEN CHANGING AEROSOL CAN. NEVER OPERATE THE DISPENSER WITHOUT AN AEROSOL CAN IN PLACE. NEVER LEAVE BATTERIES IN DISPENSER WHEN NOT IN SERVICE.

U-SPRAY, INC.

www.bugspray.com



WWW.BUGSPRAY.COM



LILBURN, GA



800-877-7290



SUPPORT@BUGSPRAY.COM