

AEROSOL DISPENSER 2000



AEROSOL DISPENSER 2000

INSTRUCTIONS

1. **Open the dispenser:** Push the top button to pull the cover forward. Dispenser cover is hinged at the bottom. To clean the dispenser cover, simply spread the hinges from the back body frame and wash in warm water with a mild detergent.
2. **Insert batteries:** Prior to inserting batteries, make sure the unit is in OFF mode. Insert two fresh D-Cell alkaline batteries into the designated slots at the top of the unit. Make sure the positive (+) and negative (-) ends of the batteries are positioned properly.
3. **Aerosol can set up:** When the unit is OFF, insert the aerosol can into the dispenser. Ensure the nozzle is facing forward and fits securely in the metal retaining bracket. **DO THIS WITH THE NOZZLE POINTED AWAY FROM YOUR HANDS AND FACE!**
4. **Activate:** Press the ON/OFF button. The LED indicator will flash green/red 3 times and the actuating arm will activate 1 time as a system check. **DO NOT POINT UNIT TOWARD YOUR FACE WHEN TURNING ON OR YOU WILL GET SPRAYED!!!**
5. **Setting spray interval:** Press the MODE button. Choose either the 5, 15 or 30 minute interval setting. The red/green LED light will remain for 10 seconds to indicate the selected interval.
Note: the unit must be ON to set the spray interval.
6. **Operation set up:** Press the MODE button to set as 24-hour operation or daytime light only. If the LED displays RED, the unit will operate for 24 hours a day. If the LED displays GREEN, the unit will operate only in the presence of light.
7. Close the cover and make sure the hatch is secure.



CAUTION: DO NOT EXPOSE EYES TOWARDS THE FRONT OF THE SPRAY NOZZLE WHEN CHANGING AEROSOL CAN. NEVER OPERATE THE DISPENSER WITHOUT AN AEROSOL CAN IN PLACE. NEVER LEAVE BATTERIES IN DISPENSER WHEN NOT IN SERVICE. ONLY INSERT AEROSOL CANS OR REPLACE BATTERIES WHEN UNIT IS OFF.

U-SPRAY, INC.

www.bugspray.com



WWW.BUGSPRAY.COM



LILBURN, GA



800-877-7290



SUPPORT@BUGSPRAY.COM