


LIGHTWEIGHT SPRAYER

Breathe at ease!
Live with peace of mind!

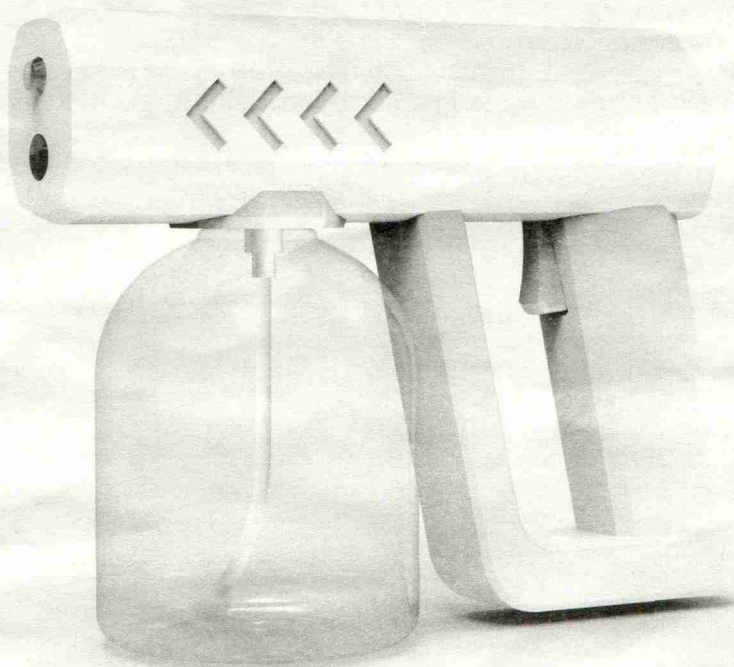

Please read the product description before operation.


1.Scope of application

Home	KTV
Car	Performing arts hall
Bar	Gymnasium
Hotel	Wedding ceremony
Troops	Factory
The cinema	Office building
School	Outdoor performances,etc


matters needing attention

1. Only authorized technicians can disassemble this product, and users are not recommended to disassemble this product.
2. Do not operate the product at will before you are familiar with the operation instructions.
3. This product needs professional personnel for daily operation and maintenance.Do not touch wires, sockets and host circuit components when hands are wet.
4. Please don't put it in the place that children touch. Minors are not allowed to use this product.
5. If you don't use this product for a long time, please turn off the machine and cut off the main power.
6. The indicator light will be on when the product is charged, and it will go out automatically when the battery is full.

2.product structure

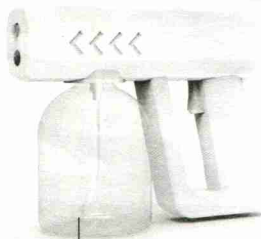

Water container

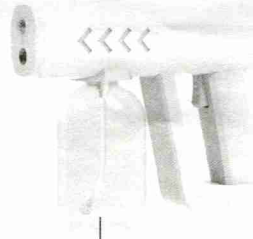

Water container

Note:

During use, the liquid in the water volume should be pi; upright as shown in the above figure to prevent the liquid from flowing back.


3.Operation introduction

After charging is completed, press the button and the machine will atomize automatically.

Then the blue indicator light beside the atomizing nozzle will light up. Please turn off the power after the atomization is completed.

4.About the battery

- Do not put the battery in water or get it wet!
- It is forbidden to charge the battery under fire or extreme heat! Do not use or store the battery near the heat source (such as fire or heater)! If the battery leaks or emits an odor, it should be moved away from an open flame immediately. Please use a special charger!
- Do not throw the battery into the fire or heat the battery
- It is forbidden to short-circuit the positive and negative poles of the battery with wires or other metal objects. It is forbidden to transport or store the battery together with necklaces, hairpins or other metal objects!
- It is forbidden to pierce the battery light body with nails or other sharp objects,and it is forbidden to hammer or pedal electric energy!
- It is forbidden to hit or throw the battery!
- It is forbidden to decompose the battery in any way!
- It is forbidden to put the battery into a microwave oven or pressure vessel!
- If the battery emits odor, heat, deformation,discoloration or any other abnormal phenomena, it should not be used: if the battery is being used or charged,it should be taken out of the instrument or charger immediately and stopped!
- Please identify the special charging line to charge the product

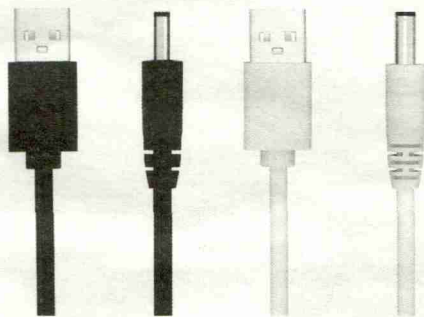

5. Specifications

Product Name: LIGHTWEIGHT SPRAYER

Nominal voltage: 3.7V **Product model:** S588

Rated power: 3W **Battery:** 1500mAh

Packing list: 1 main machine, 1 instruction manual.

Note: In view of the consistent policy of continuously improving products, the company reserves the right to change the specifications of products, and the actual goods shall be subject to delivery.

6. Maintenance and repair

1. When this product is not used for a long time, it should be checked regularly.
2. After using the atomizer, please wipe off the residual disinfectant with clean paper to wet or dry rag.
3. Do not place the product in a humid or high temperature environment. Please place it properly in a normal temperature, dry and ventilated place.
4. When the product is not used for a long time, clean the product and store it in a sealed and dry environment.
5. When dumping products, please do not pile them up with ordinary household garbage, but send them to the recycling station designated by the government to help protect the environment.

7. Special note

1. All contents in this manual have been carefully checked. If there are any typographical errors or misunderstandings in the contents, please correct and keep in touch. The company reserves the right to interpret.
2. If the product is updated, no further notice will be given. I hope the atomizer can bring you a more simple, comfortable, efficient and fashionable health care experience.

8. Precautions for safe use

To ensure that you use this product correctly, please read carefully all safety precautions before using it. The safety precautions can help you use this product correctly to avoid personal injury or property damage to you or others. The contents of safety precautions are as follows, please follow the relevant regulations of safety precautions!